



DH01 Electric Mini Dehumidifier




User Manual

Read this manual thoroughly before using
and save it for future reference

Item Number: 58041

Get To Know Your Dehumidifier

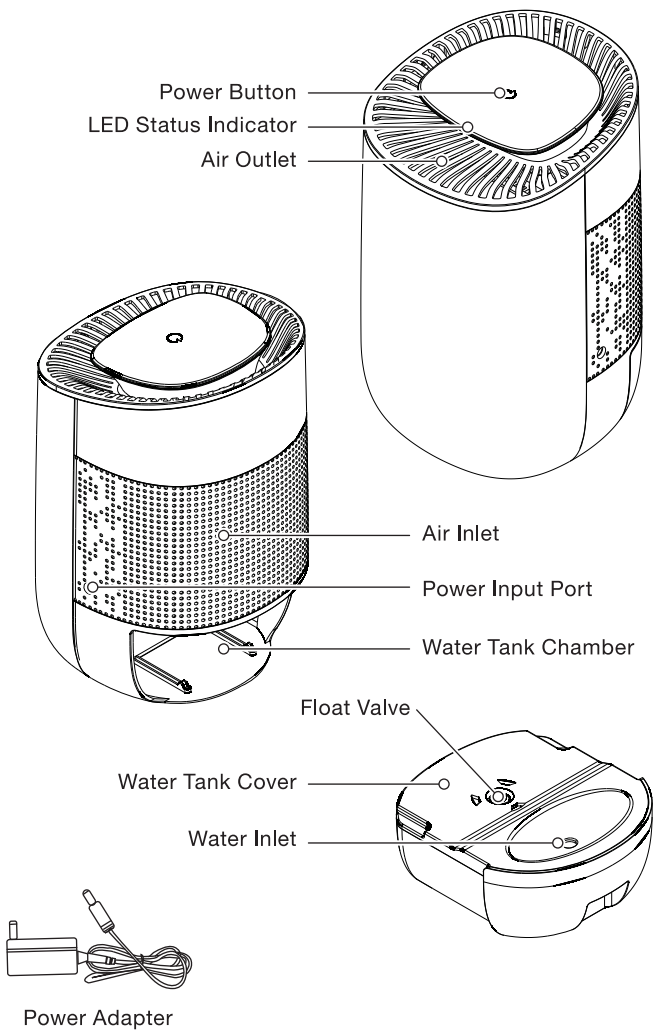

Using Your Dehumidifier

1. Make sure the water tank is empty and insert it all the way into the chamber.
2. Connect the power adapter to dehumidifier, plug it into a wall outlet.
3. Press the power button once to start dehumidifying.
4. To turn off the dehumidifier, press the power button again.

Empty The Water Tank

1. The LED status indicator will turn red when the water tank needs to be emptied.
2. Turn off the dehumidifier.
3. Pull out the water tank from chamber.
Note: Do not tilt the water tank as it's filled with water.
4. Slide out the water tank cover, pour out the water, reinsert the cover.
5. Put water tank back into the chamber.

LED Status Indicator Color

Green	Dehumidifier On
Red	Water Tank Full

Cleaning The Dehumidifier

1. Turn off the unit and unplug the power cord.
2. Remove the water tank, empty the water inside.
3. Fill water tank with warm water mixed with vinegar, leave it for 3 to 5 minutes.
4. Empty the water tank, rinse with water.
5. Use a soft damp cloth to wipe out any dust on the dehumidifier.

Note:

- DO NOT IMMERSE DEHUMIDIFIER IN WATER.
- We recommend cleaning the water every month.
- Do not use corrosive detergent for cleaning.
- Do not leave water in the tank when not in use.

Product Specifications

Air Treatment Product Type:	Dehumidifier
Moisture Removal Capacity:	300ml / day (MAX)
Water Tank Capacity:	600ml
Water Full Indicator:	Yes
Automatic Shut-off:	Yes
Operating Temperature:	50°F to 122°F
Best for Space:	Small room, 10*10ft (100sq ft)
Rated Power:	23W (max)
Power Cord Length:	5ft

Troubleshoot

Device is not working.

- Check if it's connected to power.
- Check if water tank is properly placed.

Device is not dehumidifying / no water collected.

- Check if dehumidifier is turned on.
- Check if water tank is full.
- Check if the working environment is within its operating temperature range (50°F to 122°F).
- Check if air inlet is blocked or too close to wall.

LED status indicates a full tank but it's actually empty.

- Check if the float valve is stuck, clean up the water tank and unstuck the float valve.

HAVING TROUBLE?

We have the most knowledge of our products, contact us **DIRECTLY** for full technical support!

Phone: (510) 687-0388 ext 281

Email: service@tenergy.com

Scan for more product information



www.TenergyLife.com



Electrical waste should not be disposed with household waste. Check with your local authority or retailer for recycling advice.

