



T20 Wireless Waterproof Sport Earphones

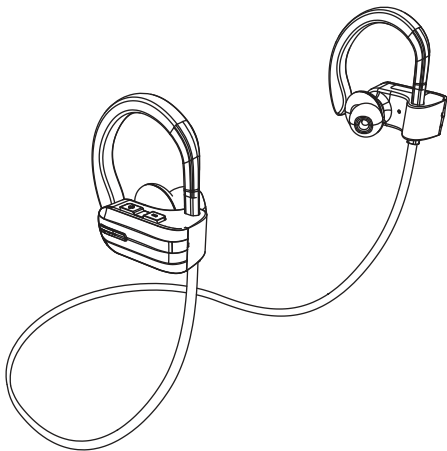


User Instructions

At a Glance

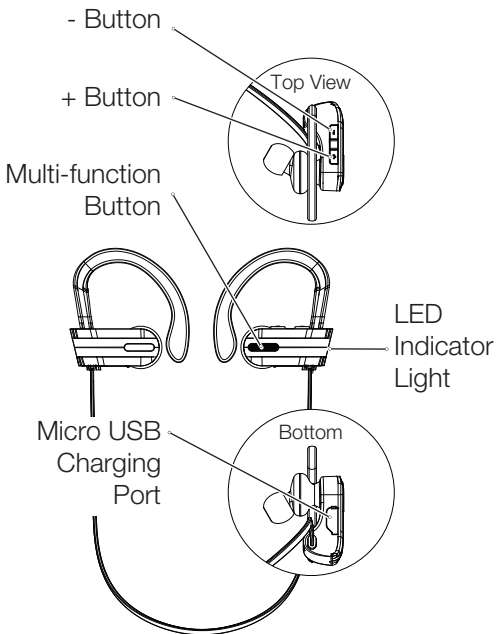

Charging Earphones

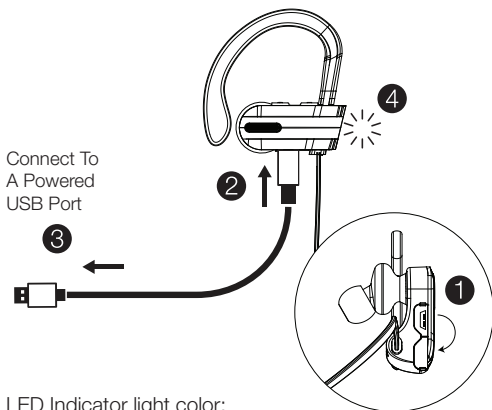

LED Indicator light color:

Red = Charging

Blue = Fully Charged

Charging time may take up to 1.5 to 2 hours


Note: Do not overcharge the device and keep it in a cool setting, failure to do so may result in shortened battery life. Do not leave your earphones to charge overnight as you will overcharge the battery.

Power On / Pairing



1

Enable Bluetooth
on your smart device.

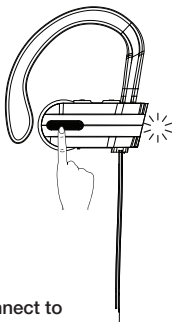

2

Press and hold
the Multi-function
Button for 3 sec.

3

When the LED is
flashing in **Blue And**
Red, the earphone is
ready to be paired.




4

Connect to
Tenergy T20
on your smart device




5

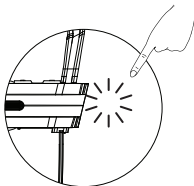

LED Indicator Flashing:
Red and Blue: Ready To Pair
Blue (Slow): Paired

Controlling The Earphone

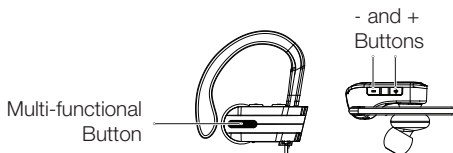

Music Playback:

Power On/Off: Press and hold Multi. Button

Play/Pause: Press Multi. Button once

Volume Up/Down: Press + or - Button

Next/Previous Song: Press and hold + or - Button

Phone Calling:

Pick up / End Calls: Press Multi. Button once

Redial: Double Click Multi. Button

Misc. Operation:

Enable Siri: Hold down + and -
(Latest Apple device only) simultaneously

Factory Reset

To restore earphone back to factory setting, connect earphone to a powered USB port (refer to charging section). Press and hold Multifunction Button for 3 seconds or until LED indicator quickly flash in blue for 3 times.

Specifications

Earphone Type: In Ear / Ear Hook

Wireless Connection: Bluetooth 4.1

Transmission Range: Up to 30Ft

Waterproof Rating: IPX7

(Withstand immersion in water up to 1 meter for up to 30 minutes)

Microphone: Built-in

Noise Reduction: CVC6.0 Digital Noise Canceling Technology

Battery: 100mAh, Rechargeable Lithium-Ion

Charge: 1-2 Hours via Micro-USB cable

Run Time: Up to 8 Hours

Standby Time: Up to 240 Hours

Weight: 20g / 0.7 ounce

Trouble Shooting

Q: My earphone will not turn on.

A: Please make sure your earphone is recharged and has enough power. Plug the earphone to a charger and check if the LED indicator becomes solid blue.

Q: Pairing to a Bluetooth device doesn't work

A: Please do the following:

- Make sure the earphone is turned on and the LED indicator is flashing blue and red
- Make sure the earphone and the Bluetooth device are close to each other within 3 feet
- Turn off the earphones and the Bluetooth device, then turn on the earphones and then restart Bluetooth device. Then retry the pairing method.
- Restore the factory settings as are indicated above

Q: After pairing, the earphone disconnects or there is too much background noise.

A: Please do the following:

- Recharge your earphone, the power may be too low.
- Units are out of range (10 meters maximum). Bring units closer together.
- Remove any object (electrical or magnetic) that may be interfering or blocking the signal between units

Q: After pairing and connecting with my Bluetooth device, I cannot hear music/audio

A: Please check the following:

- Your Bluetooth device is connected to the earphone. The LED indicator should flash blue once every 5 seconds
- Make sure the volume is at an audible level on both your earphone and the Bluetooth device
- Make sure the Bluetooth device is playing music/audio
- Some phones do not have the full stereo music function. Check by connecting to another cellphone to test the earphone

Q: There is too much background noise

A: The earphone and Bluetooth device are too far from each other (max 10 meters). Bring the devices closer together.

Q: The Bluetooth Device asks for a password / pin while pairing

A: Most Bluetooth devices don't require a password / pin during pairing, but enter "0000" (four zeros) if asked

Q: The LED indicator does now show solid red when charging the earphone

A: The earphone has been discharged for too long. Leave the unit on charge for about 30 minutes and the LED indicator should show solid red

Safety and Care

- 1.) Although the Tenergy earphones are equipped with necessary battery regulators, it is recommended not to use Quick / Fast Chargers which tend to over-charge the device and can reduce the lifespan of the battery substantially
- 2.) Do not charge earphones when they are wet due to sweat or other moisture
- 3.) Wipe away any excess sweat or moisture before and during use, any prolonged exposure to sweat can corrode the liquipel coating and can penetrate through and damage internal components
- 4.) Keep the earphones away from extreme heat and humidity. High heat will decrease the lifespan of the earphone and battery
- 5.) The earphones should be charged at least once every 6 months
- 6.) Clean with a soft cloth, damp with diluted soap water solution if necessary. Never use chemical cleaners
- 7.) Do not drop the earphone on hard surfaces
- 8.) When not in use, power the earphones off and store in a cool, dry place